First contact with equipment Pico Neo 3

MaFEA – Making Future Education Accessible PR2 – Guiding successful adoption

















First contact with equipment Pico Neo 3

Below, you can find out what you will find when you open the Pico Neo 3 package and how to adapt the various devices, so that you can start the immersive experiences correctly.

What we will find

1. Packaging and contents

This is the unopened package containing all the equipment and which should, as shown in the following pictures, be opened.












Inside we will find the following devices:




Virtual Reality glasses ready to use, with built-in protection and support for the head included. To adapt the equipment to the size of the User's head, at the back, in an intuitive and comfortable way, the User can rotate the respective device.

For this adjustment, on the top of the head, the User can also manipulate the tightening of the straps.

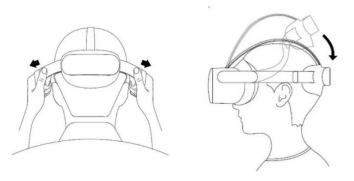

You can also adapt the distance between the lenses. The glasses allow the use of normal glasses up to 160mm.

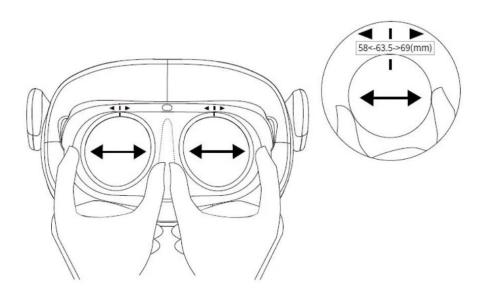






Commands



Box with charger and manuals



Equipment mapping

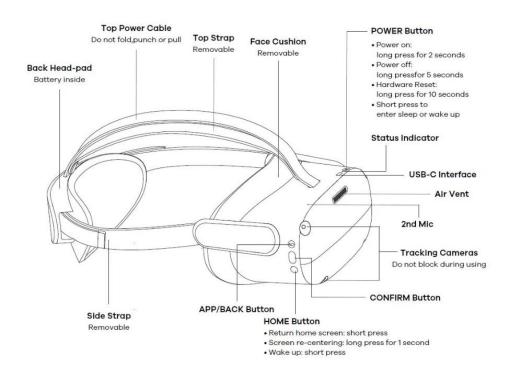

Proximity Sensor

The syst, in wakes up when VR Headset is put on, sleeps then VR Headset is taken off Right Speaker Inter-pupillary Distance Adjustment LENS

Audio Jack

Main Mic

VOLUME Button



How to adapt the equipment correctly

1. Commands



You must remove the safety tab from each control unit, which prevents the batteries (already included) from being correctly connected to the controls. First remove the cover.

Mape A

MaFEA – Making Future Education Accessible

Complement and storage

1. Storage box



To safely store and transport all the equipment, the brand offers this box with a handle as a complement.





To store the equipment, the controls should be inserted first and only then the glasses. The charger and manual can be placed in the side cover pocket.