

Installing the HoloLens2 – v1

MaFEA – Making Future Education Accessible
PR2 – Guiding successful adoption



Funded by
the European Union



mafea.eu


MaFEA – Making Future Technology Accessible

Installing the HoloLens2 – v1

It is a step-by-step plan to set up the HoloLens2.

Before starting the HoloLens 2

1. Charge the HoloLens by using the USB-C cable.
2. Fitment of the HoloLens on your head.
 - You can hold your eyeglasses on.
 - Put the brow pad on your forehead. The back band is on the back of the head.
 - Adjust the headband by turning the adjustment wheel when needed.
 - You can detach the overhead strap to shorten or losing it.

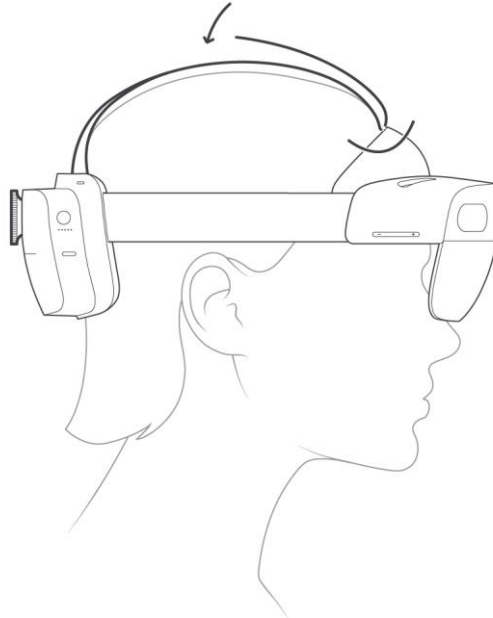

3. Use the HoloLens in a safe space with no obstructions.
4. For using the HoloLens you need a network connection. You can use a Wi-Fi or ethernet. You can use an open or a password-protected network. Connection with a network navigating to a website doesn't work.
5. You need a Microsoft account. You can go to account.microsoft.com to set up a free account if you don't have one.




mafea.eu


MaFEA – Making Future Technology Accessible

Starting the HoloLens 2 the first time

- 1) Start the HoloLens by pushing the button at the right side of the back of the head.

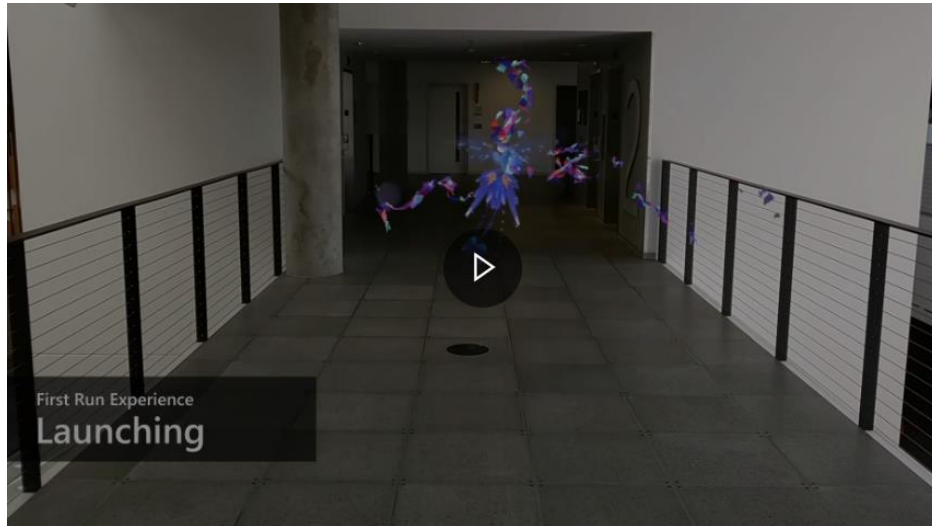

- 2) The first time the HoloLens is started, you have to set up Windows Holographic.
- 3) You have to push on the Microsoft logo button. Then you have to go through the following steps:

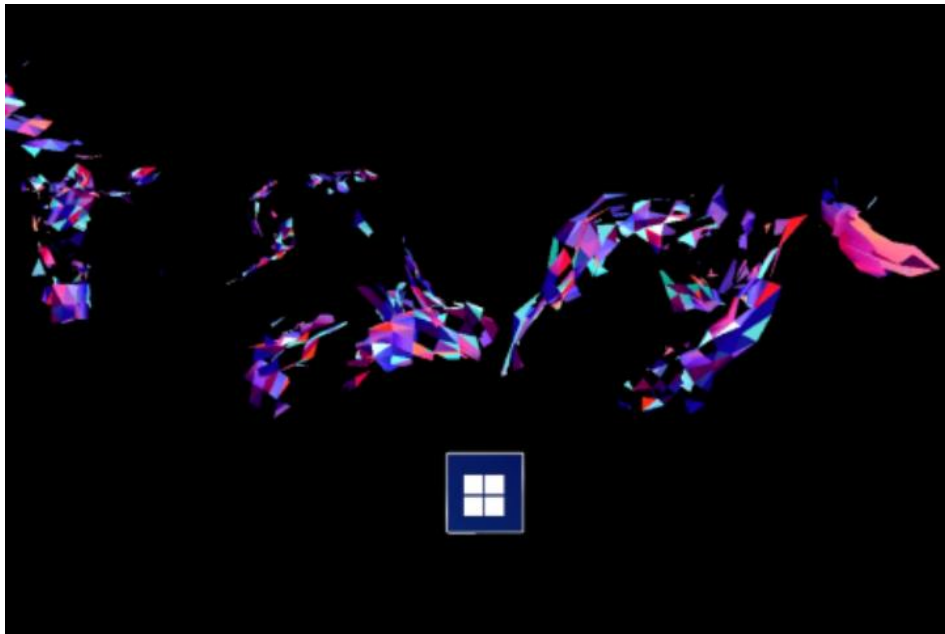


- a. Select your language




mafea.eu


MaFEA – Making Future Technology Accessible

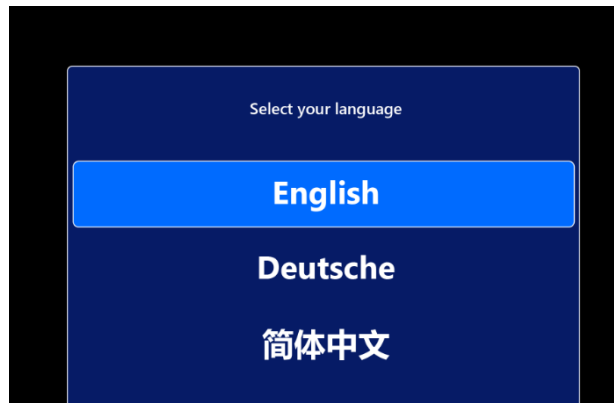

- b. Select your region

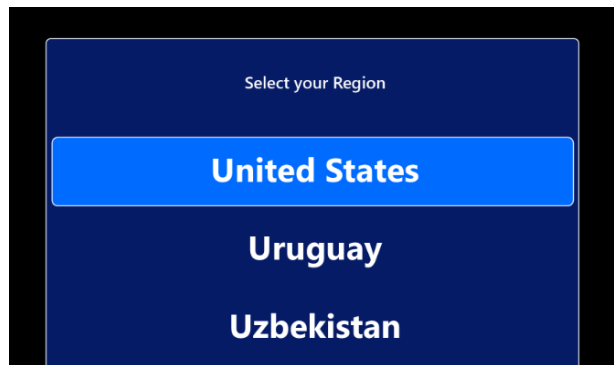



- c. calibrate the HoloLens to your eyes. (you can skip it and do it later)
d. follow the several steps to calibrate your eyes

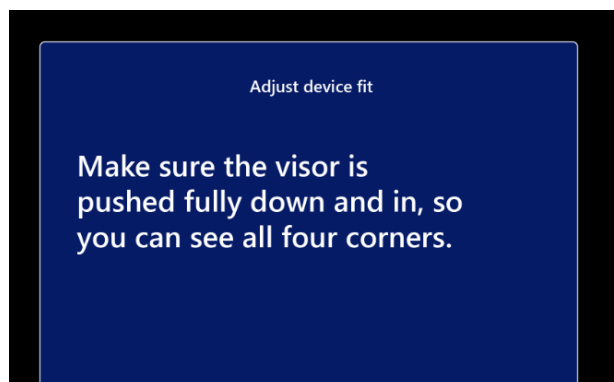




mafea.eu

MaFEA – Making Future Technology Accessible

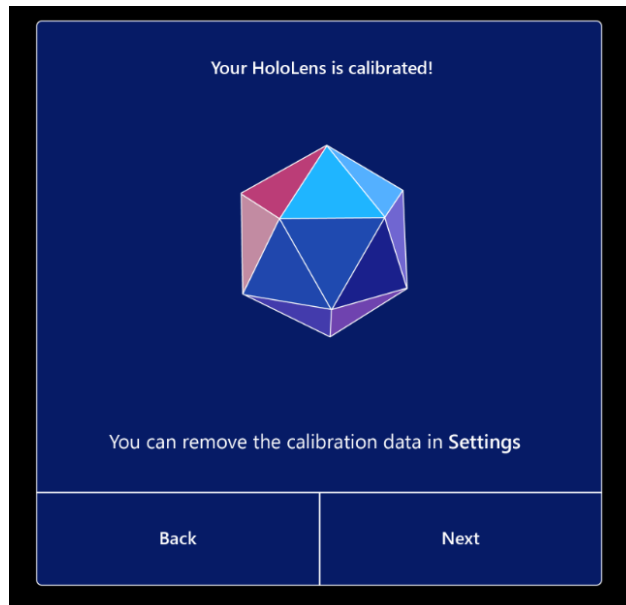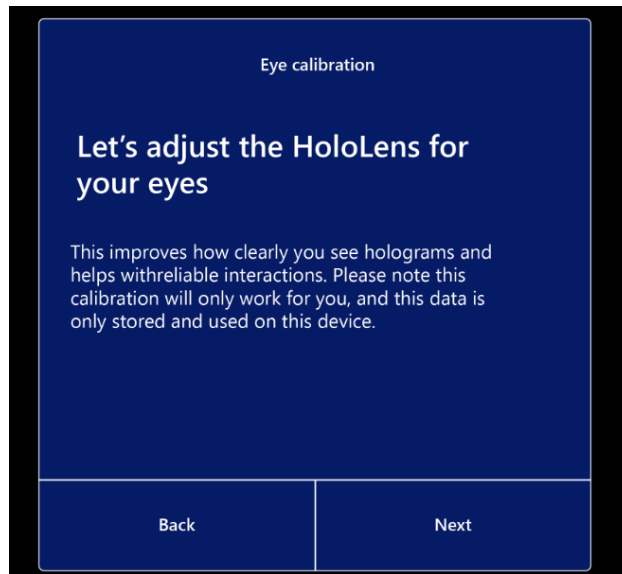

- 4) You have to connect to the internet, that can be Wi-Fi or ethernet connection

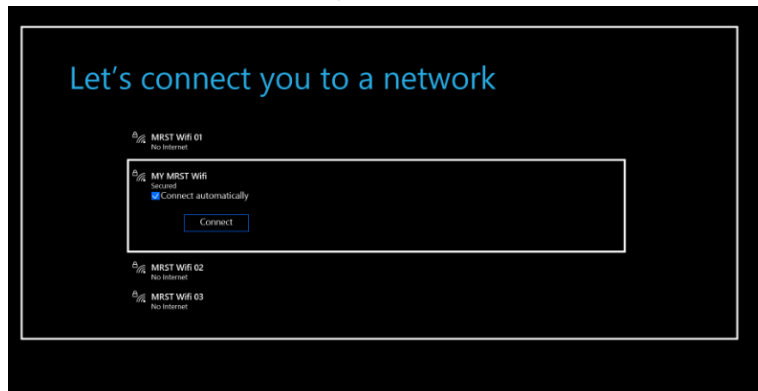




mafea.eu

MaFEA – Making Future Technology Accessible


- 5) In the next step the HoloLens will search and apply an Autopilot profile. Nothing has to be done.



- 6) Click to accept the Windows License Agreement

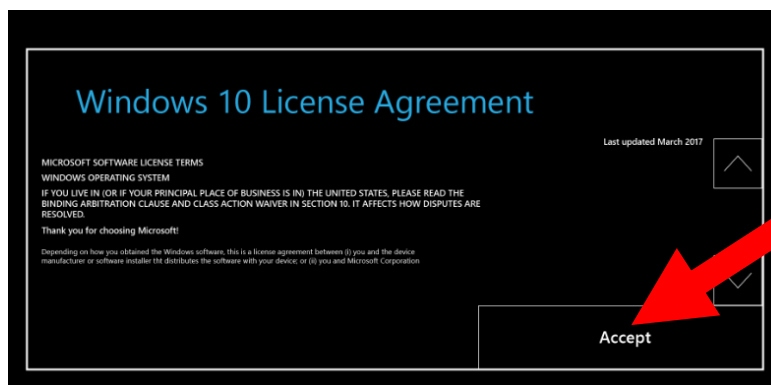

- 7) You have to sign in to your user account.


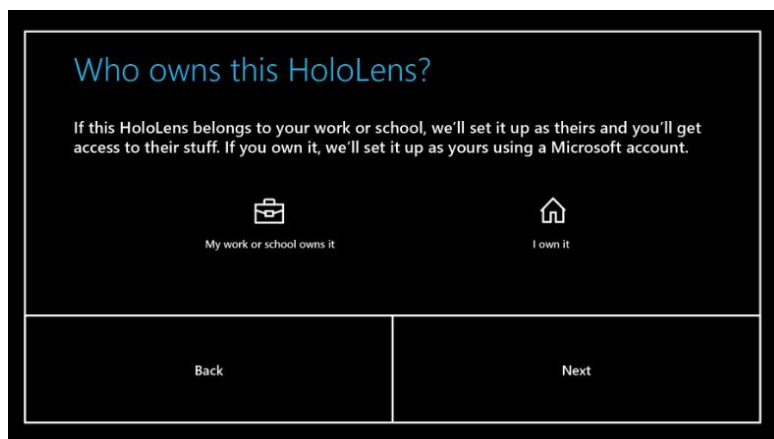




mafea.eu

MaFEA – Making Future Technology Accessible

- 8) You can also sign-in with your iris. You may also skip it.

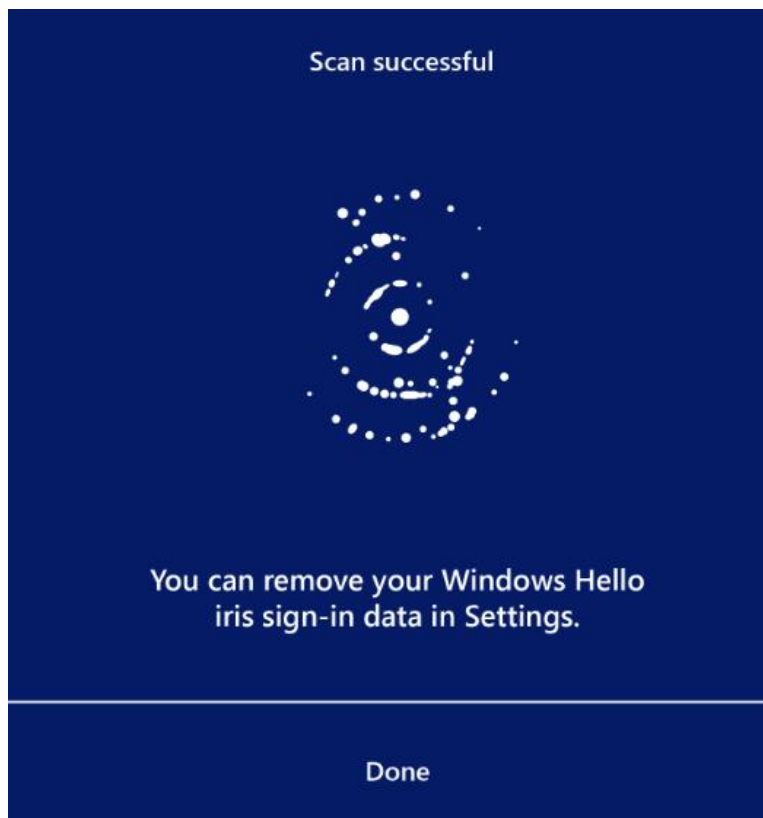
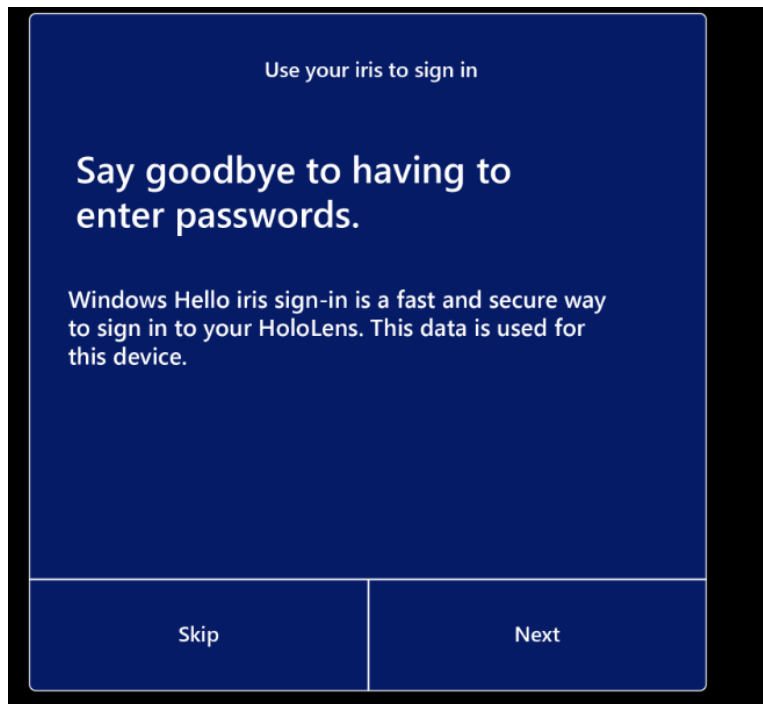




mafea.eu

MaFEA – Making Future Technology Accessible

9) To log in you have to setup a PIN

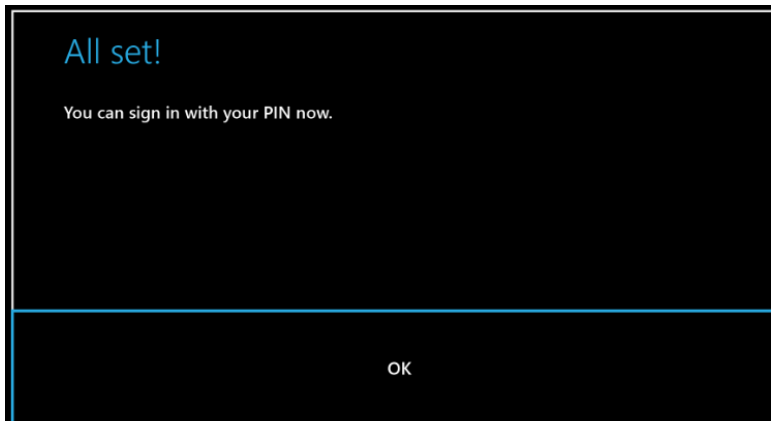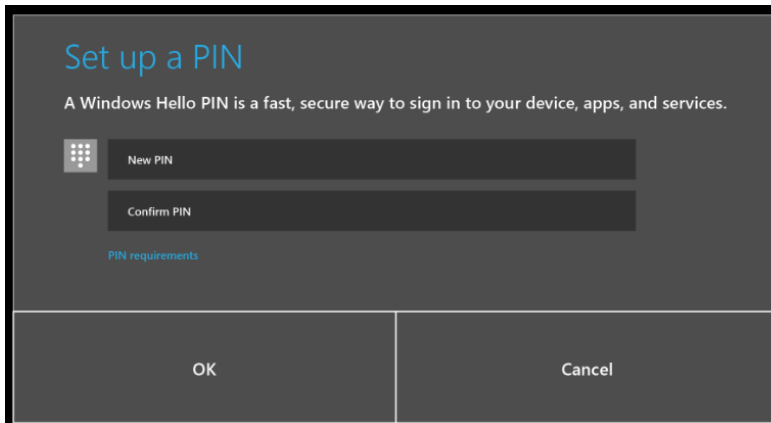





mafea.eu

MaFEA – Making Future Technology Accessible

10) You can also enable speech to use your voice for commands, dictations and app interactions.

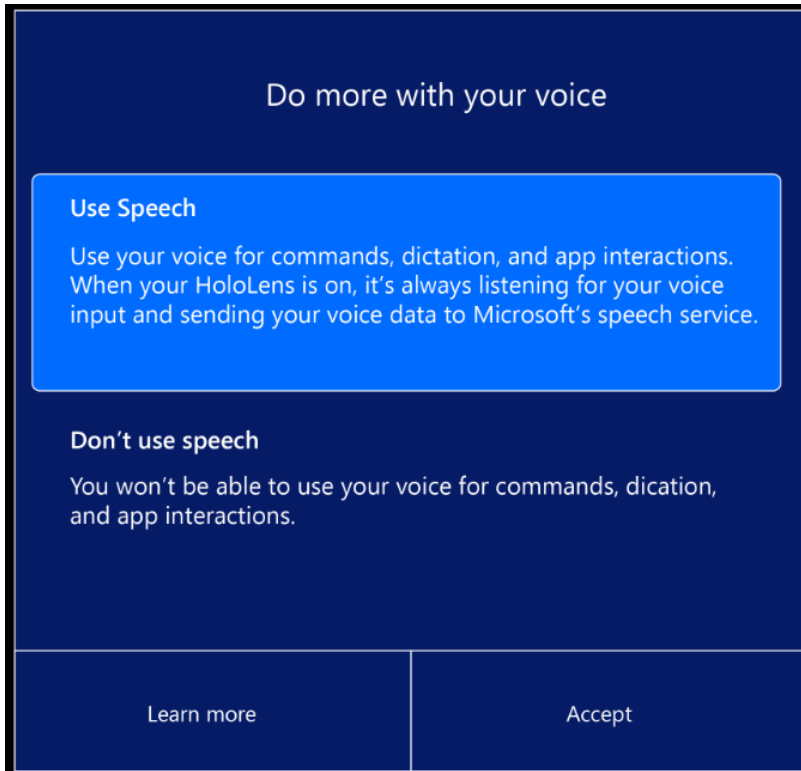

11) You can enable your location.

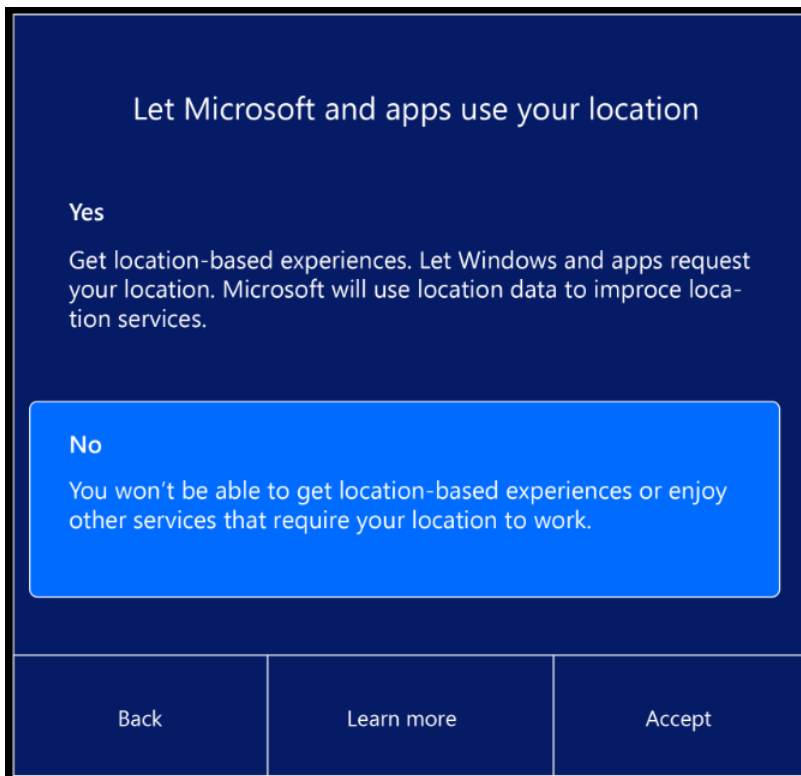





mafea.eu

MaFEA – Making Future Technology Accessible

12) Next step is to select the telemetry level.

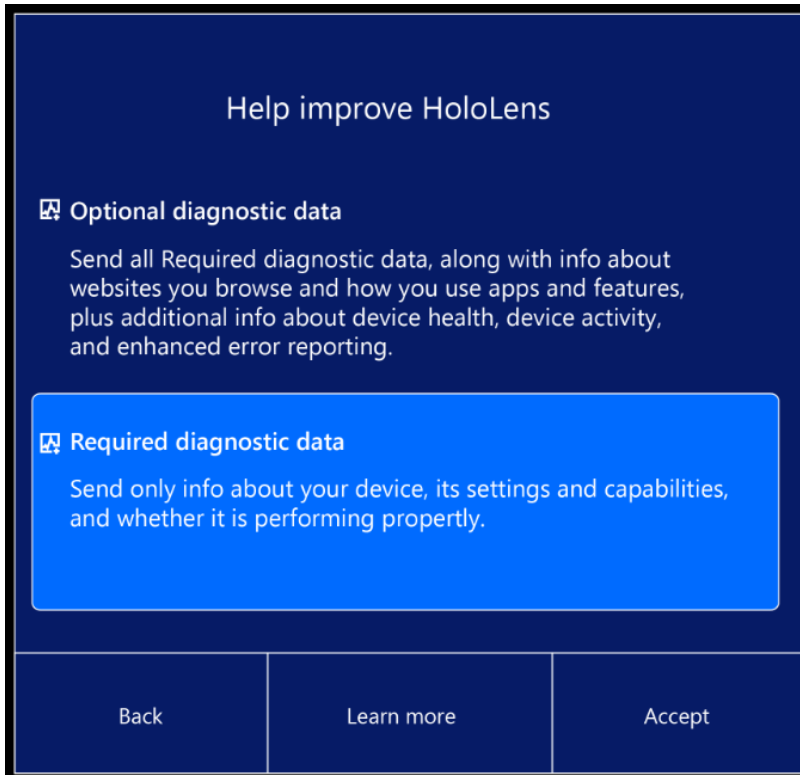

13) The last step to complete the setup is to learn the start gesture.

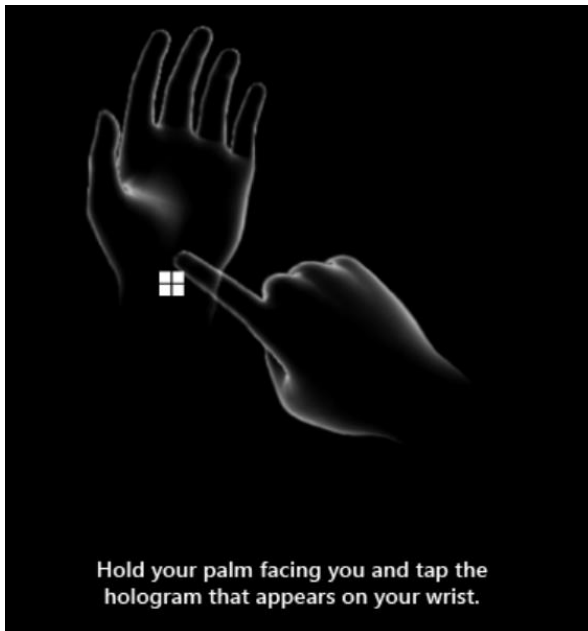



mafea.eu

MaFEA – Making Future Technology Accessible

After you have completed the setup you enter the navigation from Windows 10. It is interesting to check out the Tips app for the hands-on tutorials for hand interactions. You can use the start gesture or say “Go to Start” and select “Tips”.

